

 
★ A LIST OF ERRORS (Please read before assembly) ★

PAGE 7 CLUTCH BELL/START SHAFT ASSEMBLY

An Addition

When thrusting the Pinion Gear T9 into the Clutch Bell Assembly, do not hold the Pinion Gear with pliers as it could cause damage. Wrap the Pinion Gear with a towel etc. and secure it with your hand.

Pinion Gear T9

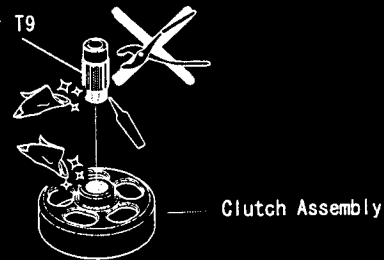


PAGE 22 TAIL GEAR CASE ASSEMBLY 2

Incorrect
3×10mm Self Tapping Screw



Correct
3×12mm Self Tapping Screw

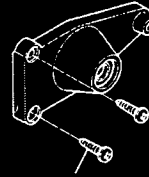

3×12mm Self Tapping Screw (×2)

PAGE 54 WASHOUT ASSEMBLY

Incorrect

※For normal flight, use the inside hole in the Washout Arm to install the Ball Joint.



Correct

※For normal flight, use the outside hole in the Washout Arm to install the Ball Joint.

Parts List

Page 60, 65	<u>Incorrect</u> Part No 60338 Low Profile Landing Struts (White)	→	<u>Correct</u> Part No 60339 Low Profile Landing Struts (White)
Page 62, 66	Part No 60758 Assembly Instruction		Part No 96049 Assembly Instruction
Page 70	Part No 80085 2.3×55mm Control Rod ×10		Part No 80085 2.3×55mm Control Rod ×2

PAGE 11 Bottom Frame Assembly

The bottom frame design has been changed to the improved version and the shape is different from the diagrams in this manual.



New Version

PAGE 17 Cooling Fan/Hub Installation

